

# Atlanta RV Rental

## Folding Camper Photos

An addendum to Manual.

# Setting up unit.



Rotate Tongue Jack and Lower. Disconnect Electric Cord and Chains and Brake-Away cable from Vehicle.



Get Key, Wheel Chocks, Lug wrench, and jack handle from Tongue Tool Box.



Place Wheel chocks on wheels, 2 per wheel (front and back)



Connect Battery



Swing Down Style Jacks



Turn on Propane Tank



Unlock Door



Swing Door Open and latch open.




Pull Doorstep out by raising edge and pulling out.



Door step in lowered position.



Prior to raising roof, unlatch all four corner latches.

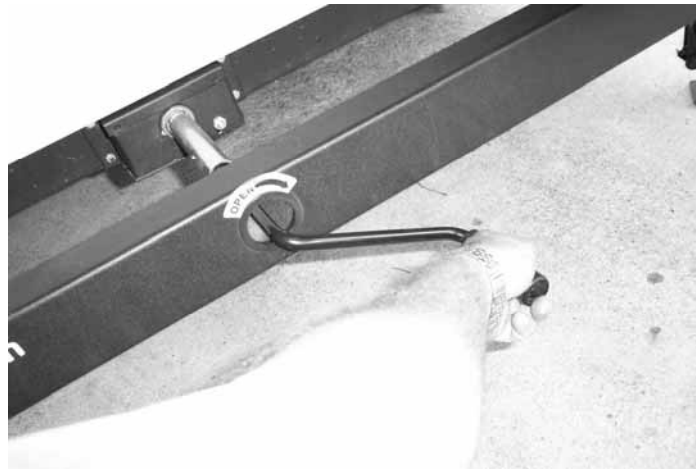

Use crank handle to raise roof to fully raised position.  
Proceed slowly and stop if any bind is encountered.



After roof is raised, lower stabilizer jacks. Put down rear jacks first before entering vehicle. Then put down front jacks.



After jacks are lowered, use lug wrench to tighten. Snug only, do not use to level unit!




Set up with all 4 jacks down.



Pull out front bed and lower bed support rails. Attach to frame rail studs.



Pull out rear bed and lower bed support rails. Attach to bumper studs.

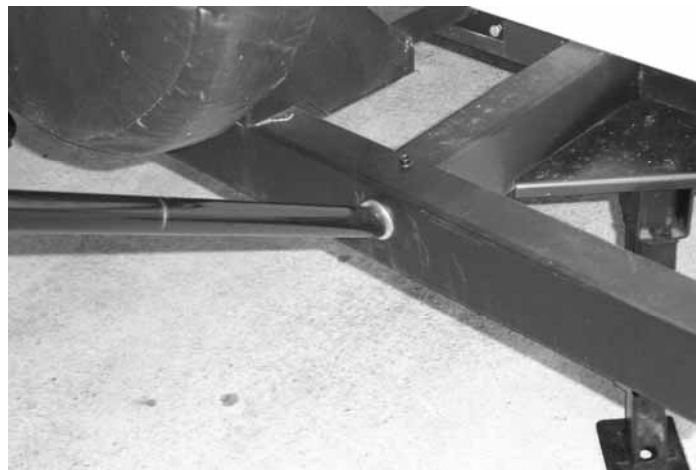

Detail of attachment to bumper.



With beds fully out, attach all bungee cords to secure tent fabric under edge of beds.  
**REMEMBER TO UNHOOK THESE BEFORE BEDS ARE PUT BACK! EXPENSIVE  
DAMAGE WILL OCCUR TO TENTING FABRIC!**



Bungee



Bungee



Bed Bow Supports stored under mattress.



Bed Bow Supports stored under mattress.




Use bed bow supports to push out bed bows, and attach at ceiling as shown.



**Bed bow attachment at ceiling. MAKE SURE TO REMOVE BED BOW SUPPORTS  
PRIOR TO PUSHING BEDS IN ON TAKE-DOWN! DAMAGE WILL OCCUR!**



Galley in travel position

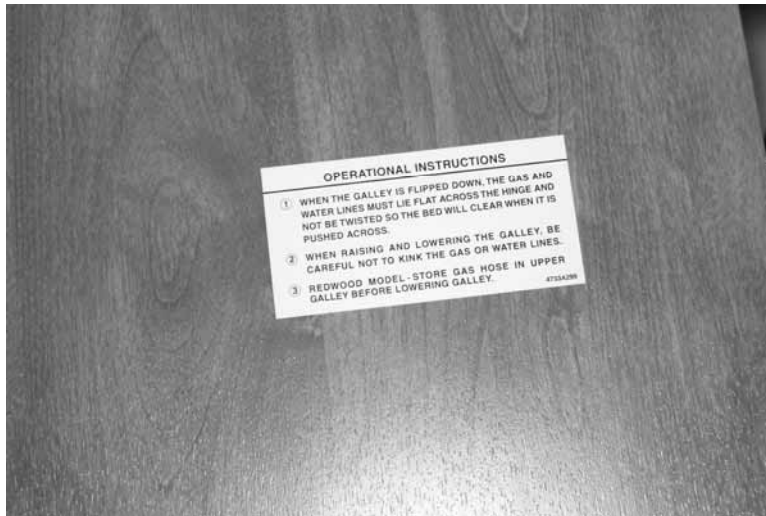

Galley Raise Lower Instructions



Raise Galley into position.



Galley in use position.



Stove



Lighting stove



Turn on Water Pump switch. Turn OFF when traveling.



Air Conditioner



Air Conditioner cord stows at ceiling under curtain with VELCRO. MAKE SURE TO STOW ON TAKE-DOWN BEFORE PUSHING IN BEDS.



At set-up Plug in A/C power cord in outlet. Air Conditioner cord stows at ceiling under curtain with VELCRO. MAKE SURE TO STOW ON TAKE-DOWN BEFORE PUSHING IN BEDS.



To lower screen door, first release two snap straps.



Release screen door from ceiling above door by pushing down on release pin and pulling door away from wall.



Slowly lower door into door frame, being careful not to scratch countertops with lower edge of door as it is lowered.



Place screen door lower edge in slot by door opening.



Push screen door in at top and secure with two latches under curtain above door.



Attach Velcro along sides of door frame to seal tent.



Sink Drains here, remove cap before using sink.



Hook up water hose and regulator here.

Connect Electric Cord in 30A Receptacle. A 30A to 15A adapter is included in the kit.



Refrigerator controls in ventilated compartment on street side of unit.



To run Refrigerator on 120V Electric, press green switch to "ON"



To run Refrigerator on Propane, Turn on Gas knob, Press and hold Grey knob and press Red igniter repeatedly until it lights.

## Taking Down Unit



Place cap on sink drain



Remove, drain and stow water hose and regulator here with ends screwed together.

Disconnect Electric Cord and stow.



**REMEMBER TO UNHOOK all bungee cords BEFORE BEDS ARE PUT BACK!  
EXPENSIVE DAMAGE WILL OCCUR TO TENTING FABRIC!**



Bed Bow Supports stored under mattress.



Use bed bow supports to push out bed bows, and attach at ceiling as shown.



Slowly lower door into door frame, being careful not to scratch countertops with lower edge of door as it is lowered.



Secure door to ceiling with two snap straps.




Secure door to wall above door with bracket and pin.



Place Galley in travel position

**WIPE UP ANY WATER THAT SPILLS FROM SINK ON FLOOR!**

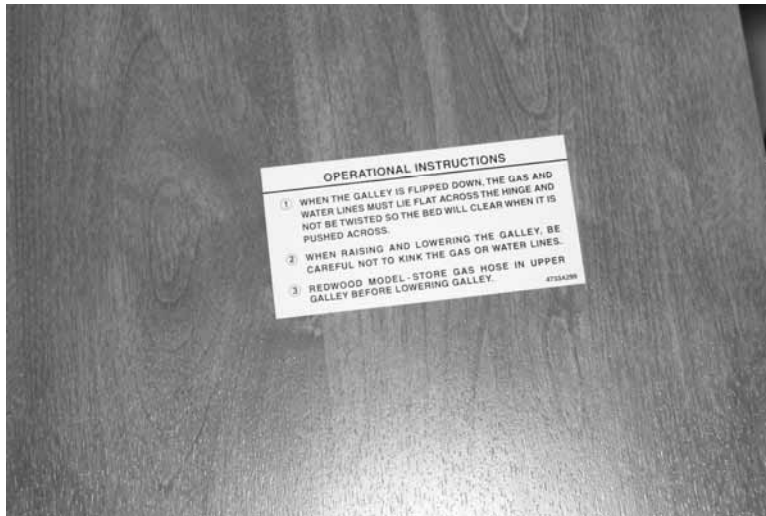

Galley Raise Lower Instructions



Air Conditioner cord stows at ceiling under curtain with VELCRO. MAKE SURE TO STOW BEFORE PUSHING BEDS IN!



Another REMINDER - REMEMBER TO UNHOOK all bungee cords BEFORE BEDS ARE PUT BACK! EXPENSIVE DAMAGE WILL OCCUR TO TENTING FABRIC!



Raise and stow bed support rails. Slowly push in front bed. Fold tenting neatly on top of bed as it slides in.



Raise and stow bed support rails. Slowly push in rear bed. Fold tenting neatly on top of bed as it slides in.



Turn off Propane Tank

HAVE REFILLED BEFORE RETURNING UNIT!




Before lowering roof, release all jacks.



Before roof is lowered, stow stabilizer jacks.



Before lowering roof, close lower door.

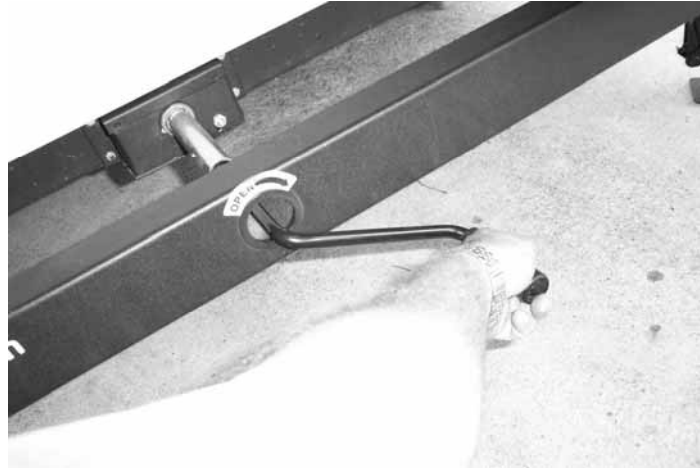

Use crank handle to lower roof to fully closed position. Proceed slowly and stop if any bind is encountered. Neatly stuff tenting in as roof is lowered.



Stow Doorstep out by raising edge and pushing in.



After roof has been lowered and all tenting secured inside, latch all four corner latches before towing.



Before towing, always check lug nuts for tightness.



Disconnect Battery



Place Key, Wheel Chocks, Lug wrench, and jack handle in Tongue Tool Box.



Connect Electric Cord and Chains and Brake-Away cable to Vehicle. Secure Hitch ball with pin. Rotate Tongue Jack and Raise.

**WALK AROUND VEHICLE AND MAKE SURE ALL JACKS ARE UP, ROOF IS LATCHED, TOOL BOX IS LOCKED, CHOCKS ARE STOWED, TIRES ARE GOOD, LUG NUTS ARE TIGHT, ETC.**